




STAND MIXER

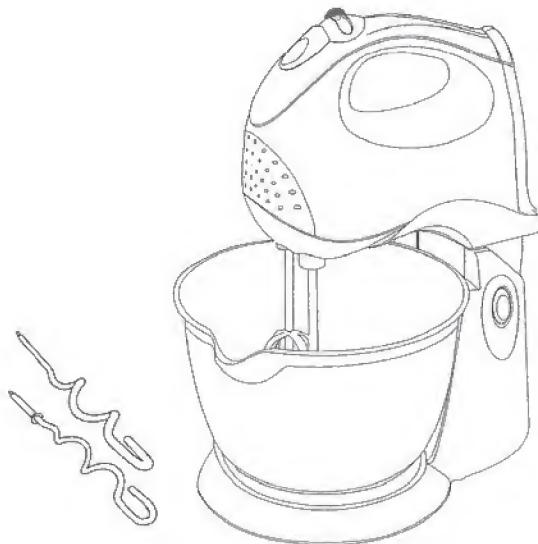

First Use Safety Recommendation

Please read through this booklet for the safe and efficient use of the appliance. We urge you to read the "Important Safeguards" section and also follow all detailed instructions even if you are familiar with a similar appliance.

Keep this guide handy for future reference.


M320

IMPORTANT SAFEGUARDS

When using electrical appliances, in order to reduce the risk of fire, electric shock, and/or injury to persons, basic safety precautions should also be followed, including the following:

- Read all instructions carefully, even if you are familiar with the appliance.
- To protect against the risk of electric shock DO NOT IMMERSE the appliance, cordset or plug in water or other liquid.
- To clean, wipe exterior with a damp cloth.
- Close supervision is necessary when any appliance is used by or near children. Never leave an appliance unattended when in use.
- Switch off and remove the Plug from the Power Outlet when not in use, before assembling or disassembling parts and pull from power outlet. Never pull cord.
- Do not operate any appliance with a damaged Cord or Plug, or after the appliance malfunctions, or is dropped or damaged in any manner. Return the complete appliance to your nearest authorized service facility for examination, electrical repair, mechanical repair or adjustment.
- If operated on wood furniture, use a protective pad to prevent damage to delicate finishes.
- The use of attachments or accessories not recommended or sold by this appliance manufacturer may result in fire, electric shock or personal injury.
- Do not overfill.
- Do not let Cord hang over edge of a table, counter, or touch hot surfaces.
- Avoid touching hot surfaces, use handles and knobs.
- Do not operate or place any part of this appliance on or near any hot surfaces (Such as gas or electric burner or in a heated oven).
- Do not abuse the Cord. Never carry the appliance by the Cord or yank it to disconnect it from the outlet; instead, grasp the plug and pull to disconnect.
- When using an extension cord with your appliance make sure the extension cord is correctly wired and rated for its use.
- This product is intended for household use only.
- Do not attempt to repair the appliance yourself; instead, take it to your Black & Decker-Owned or Authorised Service Centre for repair.
- Always disconnect the appliance from the supply if it is left unattended, before assembling, disassembling or cleaning.
- Switch off the appliance and allow moving parts to stop before changing accessories or approaching parts which move in use.

SAVE THESE INSTRUCTIONS

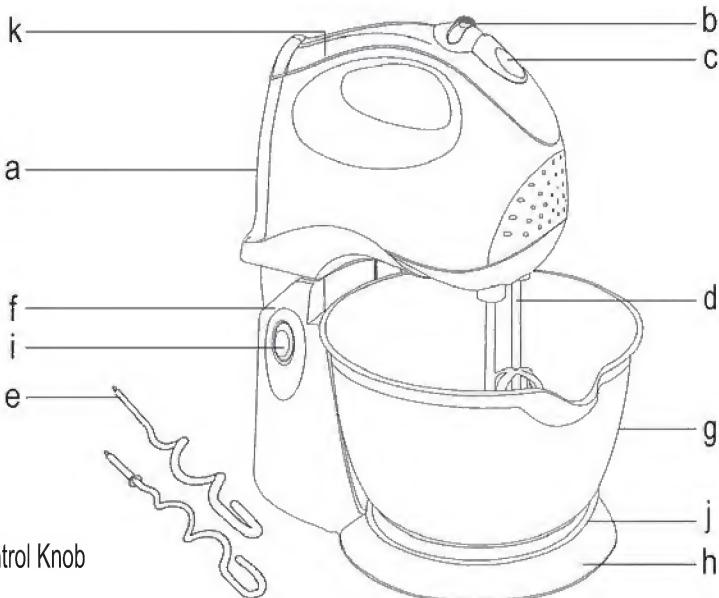

- a. Motor Housing
- b. 5 Speed + Pulse Control Knob
- c. Eject button
- d. Beaters
- e. Dough hooks
- f. Stand
- g. Bowl
- h. Platform
- i. Release button
- j. Turntable
- k. Soft handle grip

PRODUCT FEATURE OF YOUR HAND MIXER




- Five speed option for meeting all your requirements.
- Pulse operation for better mixing of ingredients
- Soft grip handle for easy and comfortable grip.
- Beaters and Dough hooks for all your mixing requirements
- 250W motor power for all the toughest performance needs.
- 2.5 lt Bowl for hands free operation

HOW TO USE YOUR HAND MIXER

- Your hand mixer is intended for indoor domestic use only.
- Kindly ensure that all the packaging has been removed from the unit.
- Ensure that the ratings on the mixer are same as the line voltage in the socket in which your are going to plug into.

INSERTING AND REMOVING THE BEATERS

1. Wash all the detachable parts before you use them for the first time.
2. Move the speed control to the "0" position and unplug the cord from the outlet before inserting or removing the beaters.
3. To insert the beaters, grip the mixer handle with one hand and the beater stem with the other hand; insert the beater stem into the opening, rotating slightly until it locks into place, repeat to attach the other beater. (Fig A & B)
4. To remove the beaters, unplug the unit, grip the motor housing by handle and lift up the motor housing from the platform and press the Eject button. (Fig C)

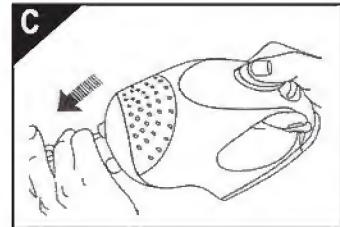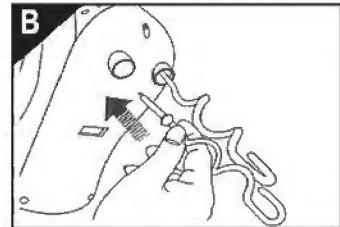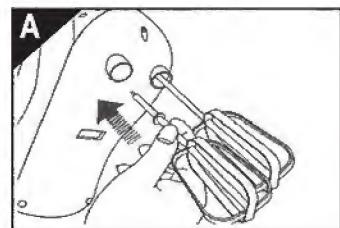

OPERATING THE MIXER

1. Move the speed control to "0" position and attach the beaters. Plug into the electrical socket.
2. Place the motor housing on the platform, guide pins on the platform should fit into corresponding recesses at the bottom of motor housing.
3. The mixer can also be removed from the stand and used as a normal hand mixer.
4. Press the release button to lift up the platform. The bowl can be taken out and replaced only when the platform with the motor housing is in the raised position up position. The bowl is placed on the turntable of the stand to obtain the best mixing effect.
5. Place the ingredient in a bowl, grip the mixer handle and simply plug in and switch on the control knob.
6. Operate the unit by selecting the desired speed based on your need (figD)
7. The freely mounted bowl will start to rotate while the contents of the bowl are being mixed.
This will help in better mixing of ingredients.
8. Once the mixing is complete to desired level, move the speed control to the "0" position and unplug the appliance from power supply. Press the release button to lift up the platform. Scrape excess mixture from the beaters or dough hooks with a plastic spatula. Press the Eject button to release the beaters or dough hooks into the bowl.
9. Now pull or the motor housing from the platform and place it on the rest in standing position.



SELECTING MIXING SPEEDS

Refer to the mixing guide below for the speed applications. You may also refer to individual recipes for suggested speeds and mixing times. If your mixer slows down excessively, switch over to the next higher speed or divide the quantity being mixed

MIXING TIPS

HOW TO BEAT EGG WHITES

1. The beaters and the bowl must be thoroughly cleaned. Ensure that there is no egg yolk in the egg whites.
2. For maximum volume, the egg whites should be at room temperature.
3. Beat with the mixer set at its highest speed until the egg whites are at the desired consistency. The intermittent use of the pulse operation will also help achieve a better froth.
4. Beating time varies with the freshness of eggs.

HOW TO WHIP CREAM

1. For whipping cream ensure that the bowl and beaters are thoroughly cleaned.
2. Start with the lowest setting (to minimize splatter); as the cream begins to thicken, gradually increase to maximum.
3. Whipping time varies with fat content, age and temperature of the cream.

HOW TO KNEAD DOUGH

1. Always use low speed setting when using dough hooks.
2. To help combine dry ingredients, remove the mixer & use a plastic spatula to scrape the sides of the bowl. Keep the spatula well away from the moving parts.
3. DO NOT attempt to feed the dough into the dough hooks with your hands during operation.
4. When the bread dough is being kneaded, it forms into an elastic ball (rather than being spread out like a cake batter). The dough hooks will move through the dough as one mass as it nears the end of the kneading process.
5. During kneading, the bowl might wobble a little. If this condition occurs excessively, you may need to reduce the load.
6. DO NOT use a mixture containing more than 2 cups of flour as this will over load the mixer.
7. We recommend kneading for no more than 4 minutes.

Speed	Function	Use
1-Low	Blend	To combine liquids, fold in dry ingredients, egg whites and whipped cream.
2-3	Stir	To prepare sauces, gravies, puddings, muffins and quick breads
2	Mix	To prepare batters and mixes
3	Beat	To cream butter and sugar, make cookie dough, cake mixes and icing
4~5	Whip	To cream together, shortening and sugar
5	Whip	To whip the fluff mixtures, whip cream, beat eggs (Whites, yolks, whole) and mash potatoes
Power Boost		To obtain the maximum power level for any speed setting for tough mixing tasks.

HOW TO CARE FOR YOUR HAND MIXER

- Before cleaning any part from the mixer, move the speed control to the off "0" position, allow all the moving parts to stop, unplug the cord from the outlet and eject the beaters.
- The beaters may be washed in hot, sudsy water or in a dishwasher.
- The mixer and cord can be cleaned with a damp cloth. To remove stubborn spots, wipe the surface with a cloth slightly dampened in sudsy water of a mild, non-abrasive cleaner, followed by using a damp cloth.
- Do not operate your hand mixer for more than 2 minutes continuously. Give a rest time of minimum 2 minutes between two operating cycles.

SOME DO'S AND DONT'S

1. Always keep hands, loose clothing, hair etc away from moving parts.
2. Do not operate the unit with wet hands or bare feet
3. Always ensure that the moving parts have come to a stop before operating the eject button.

BLACK & DECKER - PROTECTING THE ENVIRONMENT



Separate collection. This product must not be disposed of with normal household waste.

Should you find one day that your Black & Decker product needs replacement, or if it is of no further use to you, do not dispose of it with household waste. Make this product available for separate collection.



Separate collection of used products and packaging allows materials to be recycled and used again. Re-use of recycled materials helps prevent environment pollution and reduces the demand for raw materials.

Local regulations may provide for separate collection of electrical products from the household, at municipal waste sites or by the retailer when you purchase a new product.

Black and Decker provides a facility for the collection and recycling of Black & Decker products once they have reached the end of their working life. To take advantage of this service please return your product to any authorized repair agent who will collect them on our behalf.

You can check the location of your nearest authorized repair agent by contacting your local Black & Decker office at the address indicated in this manual.

كيف تعتنى بخلاتك اليدوى:

- قبل تنظيف أي جزء من الخلأط، ضع ضابط السرعة في وضع ٥ وتأكد توقف جميع الأجزاء المتحركة، افصل السلك عن المصدر وانزع الخفافتين.
- يمكن غسل المضربين في ماء حار، ماء وافر الرغوة أو غسالة الصحون.
- يمكن تنظيف الخلأط والسلك بقطعة قماش مبللة. والإزالة البقع المستعصية، امسح الرغوة بمنشف معتدل لا يحدث كشطاً ثم استعمل قطعة قماش جافة.
- لا تستعمل الخلأط اليدوى لأكثر من دقيقتين باستمرار وأوقف الخلأط لمدة دقيقتين بين كل دورتين.

افعل ولا تفعل

- ١- احفظ دائمًا الأيدي، الملابس الفضفاضة، الشعر.. الخ بعيداً عن الأجزاء المتحركة.
- ٢- لا تستعمل الآلة عندما تكون اليان مبتلتين أو القدمان عاريتين.
- ٣- تأكد دائمًا بتوقف الأجزاء المتحركة قبل تشغيل زر الفك.

بلاك آند دكر - يحمي البيئة



مجموعة منفصلة. هذا المنتج ينبغي ألا يلقى مع نفايات البيت الاعتيادية. عندما تجد بأن منتج بلاك آند دكر يحتاج إلى استبدال، أو إذا ثلم يعد لك حاجة في استعماله لا تلقه



مع نفايات المنزل المعتادة. ضع هذا المنتج في مجموعة منفصلة. تسمح المجموعة المنفصلة من المنتجات المستعملة بإعادة تصنيع واستعمال هذه المواد. وإعادة

استعمال المواد المعاد تصنيعها تمنع التلوث البيئي وتقلل الطلب على المواد الخام. ويمكن سن القوانين المحلية لفصل مجموعات المنتجات الكهربائية عن النفايات المنزلية في موقع النفايات التابعة للبلدية، أو بواسطة بائع التجزئة عند شراء منتج جديد.

ويوفر لك بلاك آند ديكرو سيلة جمع وإعادة تصنيع منتجات بلاك آند ديكير عندما ينتهي عمرها العملي.

لكي تحظى بهذه الخدمة نرجو أن ترجع المنتج إلى أي وكيل إصلاح مخول الذي سيجمعها نيابة عنا. ويمكن أن تعرف على موقع أقرب وكيل إصلاح مخول بالاتصال بمكتب بلاك آند ديكير المحلي على العنوان المشار إليه في هذا الكتيب.

اختيار سرعة الخلط

بالرجوع إلى دليل الخلط لاختيار السرعة. يتوقف على طريقة الخلط الشخصية لتحديد السرعة. إذا كان الخلط يتحرك ببطء شديد اضغط على سرعة أعلى أو وزع الكمية التي تخلطها.

أفكار في الخلط

كيف تتحقق بياض البيض

- ١- يجب تنظيف الخفاقتين بدقة. تأكد من عدم تواجد صفار البيض مع البياض.
- ٢- للحصول على أقصى حجم يجب أن يكون بياض البيض في درجة حرارة الغرفة.
- ٣- شغل الخلط على أقصى سرعة حتى يصل بياض البيض إلى درجة التماسك المرغوبة. الاستعمال المتقطع لعملية التشغيل سيحقق أفضل النتائج.
- ٤- مدة الخفق تتبادر حسب البيض الأحدث.

كيف تتحقق القشدة:




- ١- لخفق القشدة تأكد من نظافة الوعاء والمضربيين بعناية.
- ٢- أبداً بأقل سرعة (لتقليل الرذاذ المتطاير) وعندما تصبح القشدة أكثر تماسكاً ارفع السرعة تدريجياً إلى أقصى حد.
- ٣- يتوقف زمن الخفق على محتويات الدهن، وعمر ودرجة حرارة القشدة.

كيف تخلط العجين

- ١- استخدم دائماً وضع سرعة منخفض عن استعمال كلاليب العجين.
- ٢- لخلط المكونات الجافة، أبعد الخلط واستخدم ملعقة مسطحة لكشط جوانب الوعاء. إحرص على بقاء الملعقة المبسطة بعيدة عن الأجزاء المتحركة.
- ٣- احذر محاولة إضافة العجين بيديك إلى كلاليب العجين أثناء التشغيل.
- ٤- عند خلط عجينة الخبز، فإنها تكون كثيرة منرة (ما لم تفرد مثل الكيك). فإن مضارب العجين ستتحرّك في العجين وكأنه كتلة واحدة عند اقتراب انتهاء عملية العجين.
- ٥- وربما يتمايل الوعاء قليلاً أثناء عملية العجين فإذا حدث ذلك قلل الكمية.
- ٦- احذر من استعمال خليط أكثر من كوبين من الطحين وإلا سيكون فوق طاقة الخلاط.
- ٧- نوصي بعدم زيادة مدة العجن عن أربع دقائق.

السرعة	الوظيفة	الاستعمال
١- منخفض	مزج	لمزج السوائل - خلط المكونات الجافة بياض البيض - والقشدة المخفوقة
٣ - ٢	خلط ومزج	لتحضير الصالصة - صلصة مرق اللحم سحق - الفطائر والخبز المستعجن
٢	خلط	مساحيق - وخلط
٣	الخفق	الزيذ والسكر، عمل عجينة البسكويت، مخلوط الكعك والمثلجات
٥ - ٤	ضرب	الكريما - الدهن والسكر
٥	ضرب	لخفق الخليط الرقيق - لخفق (بياض، مع، والكل) لهرس البطاطس
مدعّم القوة:		للحصول على أعلى مستوى للقوّة لأي وضع سرعة من أجل أعمال الخلط الصعبة

تركيب وفك الخفاقتين

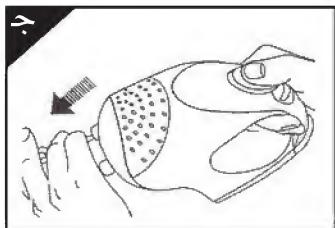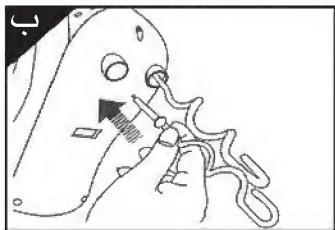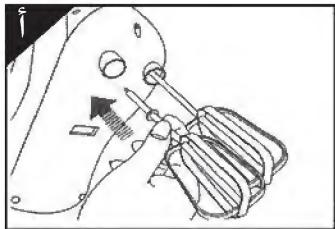


- ١- اغسل كل الأجزاء القابلة للفصل قبل استعمالها لأول مرة.
- ٢- ضع ضابط السرعة على الوضع ٥ وانزع السلك من مصدر الكهرباء قبل فك أو تركيب خفاقتين البيض.
- ٣- لتركيب المخفة، أمسك يد الخلاط بيد وقاعدة المخفة باليد الأخرى، أدخل قاعدة المخفة في الفتحة، لفها ببساطة حتى تثبت في مكانها كرر نفس العمل لتثبيت المخفة الأخرى (شكل أ، ب).
- ٤- لفك المخفتين، أمسك مقبض الخلاط واضغط زر إخراج (شكل ج).

تشغيل الخلاط

- ١- حرك ضابط السرعة على الوضع ٥ وركب الخفاقتين ثم وصلها بمصدر الطاقة.
- ٢- ضع غطاء المотор. أدخل المسامير في الفراغات على المنصة ليركب في الفتحات المناسبة في أسفل غطاء المотор.
- ٣- يمكن أن تفك الخلاط من الحامل ويمكن استخدامه كخلاط يدوي عادي.
- ٤- اضغط على زر الفك لرفع المنصة، يمكنأخذ الوعاء ويمكن استبداله عندما تكون المنصة وبيت المотор في وضع الرفع. يوضع الوعاء على مكان دوران المثبت لتحصل على خلط أكثر فعالية.
- ٥- ضع المكونات في إناء وامسك بمقبض الخلاط وضع الخفاقتين في وسط الطعام الذي تريد خفقه.
- ٦- شغل الآلة باختيار السرعة المرغوبة التي تحتاجها (شكل د).
- ٧- الوعاء الموضوع يبدأ في الدوران بحرية. بينما يتم خلط محتويات الوعاء.

- ٨- عندما يتم عملية الخلط كما هو مرغوب ضع ضابط السرعة على الوضع ٥ وانزع القابس من مصدر الطاقة. اضغط زر الفصل لرفع المنصة. اكشط المضربين أو كلاليب العجين بواسطة ملعقة كبيرة مسطحة. اضغط على زر الفصل لفك المضربين أو كلاليب العجين داخل الوعاء.
- ٩- ارفع غطاء المотор من على المنصة وضع استراحة في موقع التوقف.

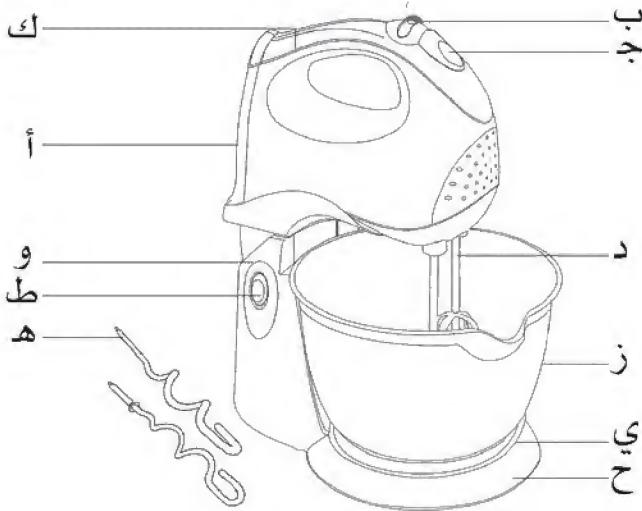

- أ- غطاء المотор
- ب- ٥ سرعات + مقبض مفتاح التشغيل
- ج- زر الإخراج
- د- المضريان
- هـ- كلاليب العجين
- وـ- حامل
- زـ- وعاء
- حـ- منصة
- طـ- زر الفصل
- يـ- مكان دوار
- كـ- مقبض إمساك ناعم

خصائص الإنتاج لخلاطك اليدوي

- خيار بين خمس سرعات لتلبية كل متطلباتك.
- تشغيل خاصية النبضة لتحسين خلط المكونات.
- مقبض إمساك ناعم لقبضة سهلة ومريحة.
- خفاقيتين وكلاليب عجين لكل ما تحتاجه للخلط.
- موتور طاقة ٢٥٠ واط لجميع احتياجات الأداء الصعب
- وعاء ٢,٥ لتر يتم تشغيله بدون لمس.

كيف تستعمل خلاطك اليدوي:

- خلاطك اليدوي مخصص للاستعمال المنزلي فقط.
- تأكد من نزع جميع أغلفة الجهاز.
- تأكد من أن أنظمة الخلط هي نفسها ذات الجهد الكهربائي في القابس الذي تتوى استعماله.

ضمان شامل لمدة سنة واحدة لأجهزة BLACK & DECKER المنزلية

تعتبر Black & Decker ضماناً شاملاً مدته سنة واحدة لهذا المنتج اعتباراً من تاريخ الشراء.

يغطي الضمان عيوب التصنيع أو المواد الداخلة في التصنيع. وفي حالة إصابة المنتج بأي عطل أثناء فترة الضمان، ستقوم شركة Black & Decker بصلاحه أو (وفقاً لتقديرها) استبداله مجاناً.

لا يغطي الضمان الأعطال الناتجة عن الحوادث، سوء الاستعمال، الإهمال، الاستعمال الخاطئ، أو عدم اتباع النظم المعمول بها محلياً. كذلك، لا تطبق شروط الضمان إذا ثبتت مسؤولية أو تصلح المنتج لدى طرف غير معتمد من قبل شركة Black & Decker ، أو في حالة استخدام قطع غيار بدون الرجوع إلى الشركة أو الحصول على موافقها، وتسببت هذه القطع في العطل. وإذا توفرت إمكانية إصلاح العطل مع عدم وجود البديل المناسب، فإن لشركة Black & Decker حق اختيار إصلاح المنتج أو استبداله بطاراز آخر بنفس القيمة الشرائية.

عند الشراء

اماً بطاقة تسجيل الضمان مع التأكيد من وجود الختم الأصلي للناشر المعتمد (وتوضيح تاريخ الشراء) ثم إيفاد الشراء بالبطاقة. الرجاء الاحتفاظ بهما لإبرازهما في حالة وجود مطالبات في المستقبل.

عملية المطالبة

خذ المنتج المعطل مع بطاقة الضمان وإيفاد الشراء بنفسك إلى مركز الصيانة المحلي أو يمكنك إرساله بالبريد المدفوعة أجرته سلفاً. وفي حالة إرسال الجهاز بالبريد أو الشحن، تأكد من تغليف المنتج من الماء كلباً وقم بتغليفه جيداً في صندوق كرتون مقى مع اضافة مواد تعليم لملء الفراغات لتفادي إصابةه بأي ضرر. ارفق ملاحظة تصف فيها المشكلة لمركز الصيانة وتأكد من كتابة عنوانك. صُمم للاستعمالات المنزلية فقط.

BLACK & DECKER HOME APPLIANCE 2 YEAR WARRANTY

Black & Decker provides a 2 Year Warranty for this product from the date of purchase against defects due to defective materials or workmanship. Motor/element burn-outs due to voltage fluctuations are not covered under warranty. If the product should become defective within the warranty period, Black & Decker will repair or (at Black & Decker's discretion) replace it free of charge.

The warranty provisions do not cover failure due to accident, misuse, abuse, negligence or non observation of local regulations on the part of the user. Equally, the warranty provisions do not apply where the appliance has been serviced by a person not authorized by Black & Decker or serviced with non-approved parts and this has contributed to the fault of the product. Superseded models without a replacement equivalent will either be repaired or (at Black & Decker's discretion) replaced with another product of similar retail value.

UPON PURCHASE

Fill in the Warranty Registration Card with the original Authorized Dealer's stamp (indicating date of purchase) and attach your purchase receipt to it. Retain in case of claims in the future.

MAKING A CLAIM

Take your defective product together with the Warranty Registration Card & purchase receipt to your local service Centre. You can either do this in person or send it freight prepaid. If mailing or shipping your appliance, ensure that it is packed carefully in a sturdy carton with enough packing material to prevent damage. Include a note describing the problem to the service Centre and be sure to give your return address.

DESIGNED FOR DOMESTIC PURPOSES ONLY.

Names & Addresses for Black & Decker Service Concessionaries

Afghanistan: Ishan National Co., Opp. Ministry of Justice, Kabul. Tel.: +93-2-2101727. **Algeria:** SARL Outillage Corporation, 04 Route De Dely Brahim Cheraga, Alger. Tel.: +213-21-364363/508, Fax: +213-21-369667. **Bahrain:** Fawaz Al Zayani, P.O.Box 26563, Adliya, Manama. Tel.: +973-17-715252/712756, Fax: +973-17-713789. **Bangladesh:** Ultra Corporation, 8, Kushol Centre, Uttara, Dhaka 1230. Tel.: +880-2-8919272/9756 Ext.28, Fax: +880-2-9887167. **Egypt:** Anasis Egypt for Trading S. A. E., P.O.Box 2443, 110 Mostafa Refaat Street, Sheraton Heliopolis 11361, Cairo. Tel.: +20-2-2684159, Fax: +20-2-2684169. **Ethiopia:** Tewfik Sherif & Co. Ltd., P.O.Box 5583, Debra Zeit Road, Addis Ababa. Tel.: +251-1-651700/801, Fax: +251-1-650570. **India:** Gryphon Impex Pvt. Ltd., D-6/4, Okhla Industrial Area, Phase-I, New Delhi-110020. Tel.: +91-11-26372602-4, Fax: +91-11-26372801. **Iran:** Tehran - Service Centre of Iran, No 510, South Karger Ave, Below Pasteur Sq. Tehran. Tel.: +98-21-6490608/0656/6407672. **Kish Island:** Cayhan Electric Co., No. 69, Paradise Shopping Centre, Kish Island. Tel.: +98-76444-22894. **Jordan:** Bashiti Hardware, P.O.Box 1564, TLA Ali, Amman. Tel.: +962-6-535009/4770741, Fax: +962-6-5350012/4789783. **Kenya:** Zylog Enterprises, IPS Building, Kuanda Street, P.O.Box 40877, Nairobi. Tel.: +254-2-338188/199, Fax: +254-2-330642. **Kuwait:** Al Omar Technical Co., P.O.Box 4062, 13041 Safat, Kuwait. Tel.: +965-4848595/0039, Fax: +965-4845652. **Lebanon:** Est. FA, Kettaneh SA, P.O.Box 110242, Dora Highway, Kettaneh Building, Beirut. Tel.: +961-1-255880/6, Fax: +961-1-255891. **Libya:** El Ghouri Brothers, P.O.Box 348, Islamic Call Bldg., Office 201-202, Benghazi. Tel.: +218-61-9097681/4183, Fax: +218-61-9094123. **Madagascar:** Group Tana Confort S. A. R. L., B. P. 1770, Antananarivo. Tel.: +261-20-2264505, Fax: +261-20-2264244. **Malta:** John G. Cassar Ltd., 36 Victory St, Qormi QRM 0056, Malta. Tel.: +356-21-493251, Fax: +356-21-483231. **Mauritius:** Happy World Marketing Ltd., Block 2, Industrial Estate, Coromandel, P.O.Box 429, Port Louis. Tel.: +230-2076700, Fax: +230-2337330/7400. **Nepal:** Universal Trading Centre, P.O.Box 1947, Tripureswor, Kathmandu. Tel.: +977-1-262192/260587/785, Fax: 261154. **Nigeria:** Amin Bros. Eng. Co. Ltd., 30A (Plot 1291), Akin Adesola Street, Victoria Island, Lagos. Tel.: +234-1-3201778, Fax: +234-1-2613667. **Oman:** Oman Mktg. & Service Co., P.O.Box 2734, Ruwi, Muscat. Tel.: +968-560232, Fax: +968-560255. **Pakistan:** Karachi - Anmar Service & Spares, 60, Bank Arcade, Seral Road, Karachi. Tel.: +92-21-2426905, Fax: 2427214/5243. **Pakistan:** Lahore - Electronics Inn, 212-G Raji Centre, Main Market, Gulberg, Lahore. Tel.: +92-42-5756750. **Philippines:** Modern House International Enterprises, 213 Rizal Ave. Extension, between 2nd and 3rd Ave. Kalookan City. Tel.: +632 366-4487, Fax: +632 366-4489. **Qatar:** Al Mutah Trading & Cont., P.O.Box 875, Doha. Tel.: +974-4650880/4446868, Fax: +974-4441415. **Saudi Arabia:** Dammam - Ebrahim Fawaz Al Zayani, P.O.Box 76026, Al Raka, Dammam. Tel.: +966-3-8140914, Fax: +966-3-8140824. **Jeddah:** Anasis - P.O.Box 50959, Jeddah - 21477. Tel.: +966-2-6710014, Fax: +966-2-6725929. EAC (Al Yousuf) - P.O. Box 30377, Jeddah - 21477. Tel.: +966-2-6511912, Fax: +966-2-6511153. **Madina:** Garziz Trdg. for Bldg. Mat.&Decor., P.O.Box 3364, Madina. Tel.: +966-4-8261490/8227636, Fax: +966-4-8265741. **Riyadh:** Anasis, P.O.Box 18689, Riyadh - 11425. Tel.: +966-1-2693751, Fax: +966-1-4501178. **Yanbu:** Al Alfif, P.O.Box 530 Yanbu, Al Bahr. Tel.: +966-4-3222626/8867, Fax: +966-4-3222210. **Sri Lanka:** Deltamega Gen. Equip. Pvt. Ltd., No. 428/1AT. B, Jaya Mawathai (Darley Road), Colombo-10. Tel.: +94-11-2665914, Fax: +94-11-2665915. **Sudan:** United Distribution Company, P.O.Box 325, Sayed Abdul Rehman Street, Khartoum. Tel.: +249-11-772612/777296, Fax: +249-11-770919. **Tanzania:** General Motors Investment, P. O Box 16541, 14 Vingunguti Nyerere Road, Dar Es Salaam. Tel.: +255-22-2862661/5022, Fax: +255-22-2862667/5412/3. **Tunisia:** Sfax - Techni Sud, 68, Rue d'Algérie, Sfax. Tel.: +216-4-226335. **Tunis:** Souissi Acce Home Centre, Zone Industrielle, Megrine (Saint Gobain), Z4-Tunis. Tel.: +216-1-428038, Fax: + 216-1-429540/330. **UAE:** Abu Dhabi - Light House Electric., P.O.Box 120, Abu Dhabi. Tel.: +971-2-6726131, Fax: +971-2-6720667. Dubai - Black & Decker (O) A.G., P.O.Box 5420, Dubai. Tel.: +971-4-7028234/233, Fax: +971-4-2822765. Ideal Mach. & Equip't, R. Workshop, P.O.Box 37118, Al Quoz, Dubai. Tel.: +971-4-3474180, Fax: +971-4-3474157. Sharjah - McCoy Middle East LLC, P.O.Box 20228, Sharjah. Tel.: +971-6-5336321, Fax: +971-6-5336320. **Uganda:** The Building Centre, Kitgum House, 52 Station Road, P.O.Box 7436, Kampala. Tel.: +256-41-234567, Fax: +256-41-236413. **Yemen:** Aden - Middle East Trad. Co. Ltd., Mulla Dakka, Aden. Tel.: +967-2-240950, Fax: +967-2-240952. **Sana'a:** Middle East Trad. Co. Ltd., P.O.Box 12363, Hayel Street, Sana'a. Tel.: +967-1-204201, Fax: +967-1-204204. **Taitz:** Middle East Trad. Co. Ltd., Campa area near Al-Kair mosque, Talz. Tel.: +967-4-231610/232033, Fax: +967-4-219869. **Zimbabwe:** J.D.Distributors, P.O.Box 226, 17 Bessemer Road, Graniteside, Harare Tel.: +263-4-753913-7, Fax: 753918.



WARRANTY REGISTRATION CARD

YOUR NAME/
الإسم

YOUR ADDRESS/
العنوان

POSTCODE/
الرمز البريدي

DATE OF PURCHASE/
تاريخ الشراء

DEALER'S NAME & ADDRESS/
اسم و عنوان البائع

PRODUCT MODEL NO:M320